


Lamona Oven Instructions

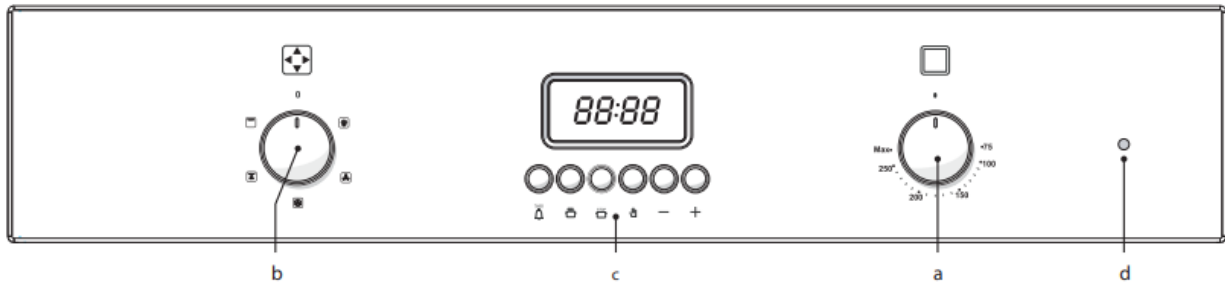

- a. Main oven thermostat knob
b. Main oven function knob
c. Digital timer
d. Oven / grill temperature indicator

Operating modes

All functions for the ovens and grill are listed in this section.
The order of operating modes shown here might deviate from the arrangement on your appliance.

Oven Light



This operates the oven internal light only. No heat will be generated, The outside cooling fan may also operate.

Defrost



The oven is not heated. Only the fan (in the rear wall) is in operation. Frozen granular food can be thawed slowly at room temperature, and cooked food can be cooled down.

Fan Cooking



The element & fan (in the rear wall) are both in operation. Hot air is distributed evenly and quickly all over the cavity by the fan. In most cases, preheating is not required. This mode is suitable when several levels are used for the cooking and an even temperature is required throughout the oven cavity .

Fan-Grill



The grill effect is not as strong as with the full grill and heat is distributed more evenly.

Ensure correct shelf position is used, set the temperature to maximum level, and turn the food as required to ensure even cooking. time.

Grill -Full



The full grill element in the top oven is in operation. This is suitable for grilling larger dishes

Ensure correct shelf position is used, set the temperature to desired level, and turn the food as required to ensure even cooking.